

Uniden®

UWS1117

OWNER'S MANUAL

UWS 1117 Digital Wireless Surveillance System

Owner's Manual

What's in the box?

UWS1117 receiver with 7-inch color display and remote control



Software CD





AV cable



USB cable



AC adapter

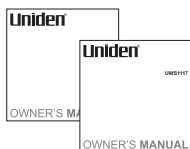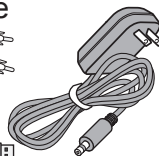

Owner's Manual
PC Software Manual

If any items are missing or damaged, contact your place of purchase immediately.


Never use damaged products!

**Need Help? Get answers at our website:
www.uniden.com.au for Australian model or
www.uniden.co.nz for New Zealand model.**




Weatherproof
video camera

Camera
stand

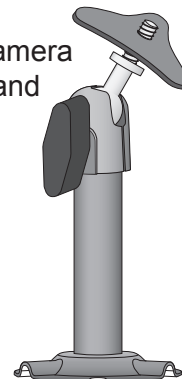

 1.8m
Extension
cord



AC adapter




Antenna



Portable
indoor video
camera



Camera
stand

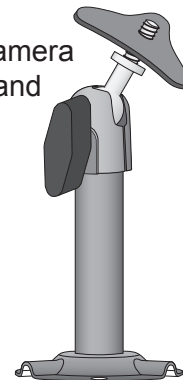

AC adapter



Important Safety Instructions!

This manual contains important information about this product's operation. If you are installing this product for others, you must leave this manual or a copy with the end user.

When using your equipment, always follow basic safety precautions to reduce the risk of fire, electric shock and injury to persons, including the following:

- ❑ This equipment is NOT waterproof. DO NOT expose it to rain or moisture (for the weatherproof video camera: DO NOT expose it to excessive water or moisture).
- ❑ DO NOT immerse any part of the product in water. Do not use this product near water, e.g., near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- ❑ To avoid any risk of electric shock from lightning, avoid handling any electronic devices (except battery powered ones) during an electrical storm.
- ❑ Use only the power cord and/or batteries indicated in this manual. Never dispose of any batteries in a fire: they may explode. Check with local codes for possible special disposal instructions.
- ❑ Never tug or pull on any power cord: be sure to leave some slack in the cord when placing your equipment, and always use the plug to unplug cord from the wall outlet.
- ❑ Never leave power cords where they can become crushed, cut, or frayed; when running power cords, avoid letting them rub against any sharp edges or lie across any high traffic areas where people might trip over them.
- ❑ Do not use the device if the adapter cords or plugs have been damaged, the unit has been exposed to liquids, or the unit has been dropped or is damaged.

Warnings to Parents and Other Users

Failure to follow these warnings and the assembly instructions could result in serious injury or death. This product is not designed or intended for use as a medical monitor, nor should this product be used as a substitution for medial or parental supervision. Always be sure that both the transmitter and receiver are working properly and are within range of each other.

- ❑ STRANGULATION HAZARD. Keep the adapter cords out of the reach of children.
- ❑ WARNING: KEEP OUT OF THE REACH OF CHILDREN. Allow for proper ventilation when units are in use. Do not cover the camera or receiver with any object such as a blanket. Do not place it in a drawer or in any location which would muffle the sound or interfere with the normal flow of air.

SAVE THESE INSTRUCTIONS!

For best results:

To avoid damage to your equipment, follow these simple precautions:

- ❑ Do not drop, puncture or disassemble any part of the equipment. There are no user-serviceable parts inside.
- ❑ Do not expose the equipment to high temperatures, and avoid leaving the equipment in direct sunlight for more than a few minutes. Heat can damage the case or electrical parts.
- ❑ Do not place heavy items on top of the equipment or expose the equipment to heavy pressure.
- ❑ Remove the power adapter during long periods between usages.
- ❑ Clean only with a dry cloth.

Failure to follow the instructions in this operating manual will void the warranty. Uniden assumes no liability for damages to property or injury to persons caused by improper handling or failure to comply with these safety instructions.


Contents

Important Safety Instructions! .4	Adjusting the Sun Shield (Outdoor Camera Only)..... 12	Using Quad Display 21
Warnings to Parents and Other Users4	Get to Know the Receiver and Remote..... 13	To enter quad display 21
For best results:5	What the buttons do 13	To exit quad display 21
Getting Started4	What the lights mean..... 14	Solving Problems.....22
Connect the Power6	What the connections do 14	Unstable or Weak Signal 23
Check the Video Signal6	Using the Menu..... 15	Weak signal and video performance..... 23
Learning Your System7	Using Zoom Mode 16	Noise or Static..... 24
Get to know the Indoor Camera ...9	Pan and tilt in zoom mode... 16	Resetting Your System 25
What the lights mean9	Understanding Night Vision..... 16	Additional Information25
Get to Know the Outdoor Camera..... 10	Connecting to Your TV 17	Product Specifications..... 25
What the lights mean..... 10	Reducing pixellation 17	One-year Limited Warranty27
Using the Camera Stand..... 10	Multiple Camera Features..... 18	
Switch the bracket (Outdoor Camera Only)..... 11	Pairing Cameras 18	
Mount the stand 11	Some things to know about pairing cameras:..... 18	
Attach the camera..... 12	Changing to a Different Camera 19	
	Setting Up a Scan 20	

Getting Started

Connect the Power


1. Connect one AC adapter with large 5mm plug to the receiver's power input.

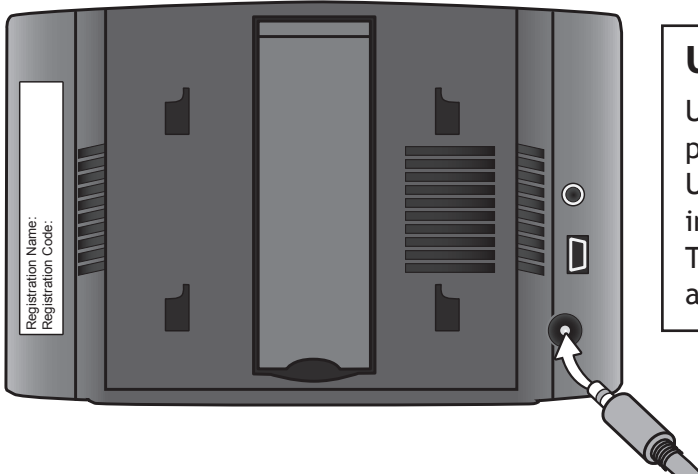


Using the Correct AC Adapter


Use either of the 2 AC adaptors with large 5mm plug for the monitor or outdoor camera. Use the AC adaptor with small 3mm plug for the indoor camera only. The adapter plugs will fit only into the appropriate device.

2. Outdoor Camera: Attach the antenna to the rear of the outdoor camera and connect one AC adapter with large 5mm plug to the camera's power input pigtail. (If necessary, connect the 1.8m extension cord to the camera's pigtail and connect the AC adapter to the extension cord.)

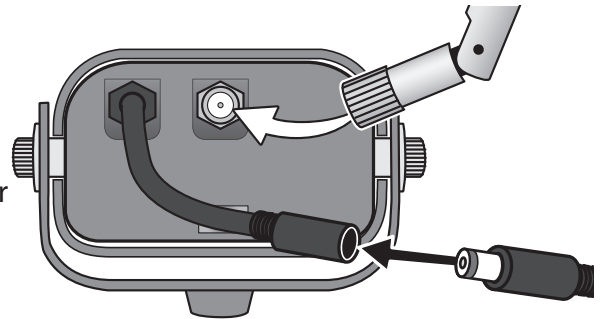

3. Indoor Camera: Connect the AC adapter with small 3mm plug to the camera's power input

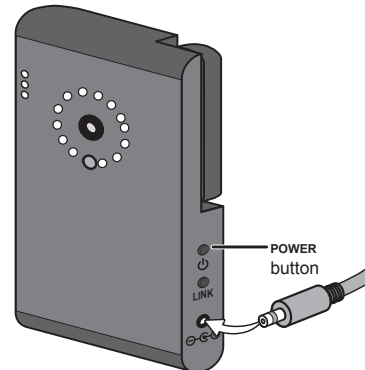

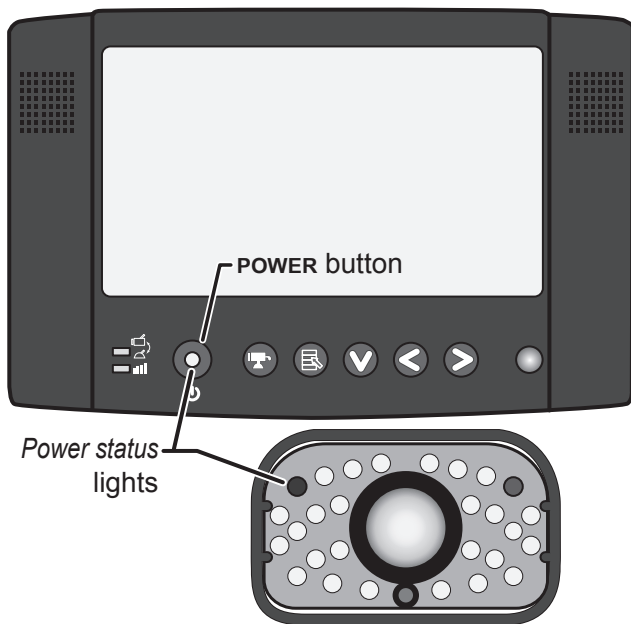

4. Connect the other end of each adapter to a 240 volt AC (standard indoor) power outlet, and press the **POWER** button on the front of the receiver or on the remote control.
5. Make sure the *Power status* lights on the front of the receiver and each camera all turn on.

If...	Try...
a <i>Power status</i> light doesn't come on	<ul style="list-style-type: none"> - reconnecting the AC adapter - seeing if the power outlet is controlled by a wall switch





Check the Video Signal

As soon as the receiver powers on, it detects the camera and shows the video on the display. The icons at the top of the screen tell you what's going on with the camera and receiver.

The table below shows the different status icons and what they mean. Since the icons appear based on the state of the camera and receiver, you won't see all of these icons at the same time.

Signal status Channel status



Icon	What it means
	The signal from the camera is 1-low, 2-fair, 3-good, or 4-perfect.
	There is no signal from the camera.
	The video currently on the display comes from the camera connected to channel 1, 2, 3, or 4.
	The video is currently zoomed in.

If...	Try...
the signal status icon shows no bars or the display says <i>No Signal</i>	- making sure the camera is turned on - re-pairing the camera and receiver (see page 18)
the signal status icon shows one or two bars or the video quality is poor	see page 23 for tips on improving video quality
there is a lot of static on the receiver	see page 24 for tips on avoiding interference

Learning Your System

Get to Know the Indoor Camera

What the buttons do

Button	What it does
POWER	Turn the camera on. Press and hold to turn it off.
LINK	Enter pairing mode.

What the lights mean

Power Status light


State	What it means
On	The camera is on.
Off	The camera is off.

Link Status light

State	What it means
Flashing	The camera is in pairing mode.
Orange	The camera is connected to the receiver.
Off	The camera is in standby.


Battery Status light

State	What it means
Green	The battery is charging.
Red	The battery is low; the camera will turn off in 3 minutes.
Off	The battery is fully charged.

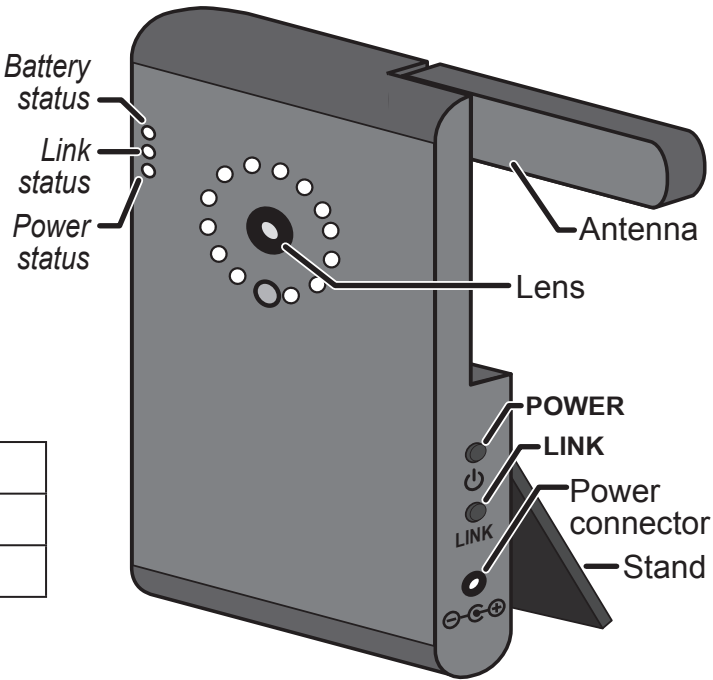


Get to Know the Outdoor Camera

Front view

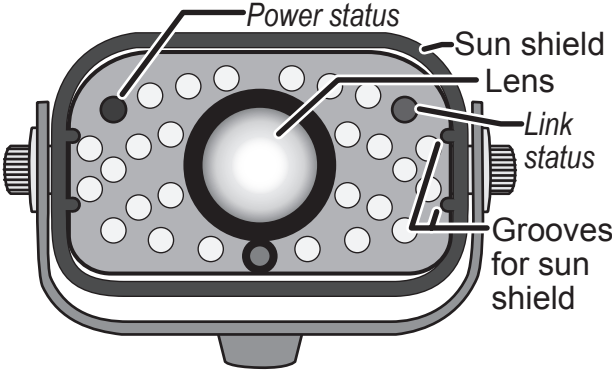

Back view

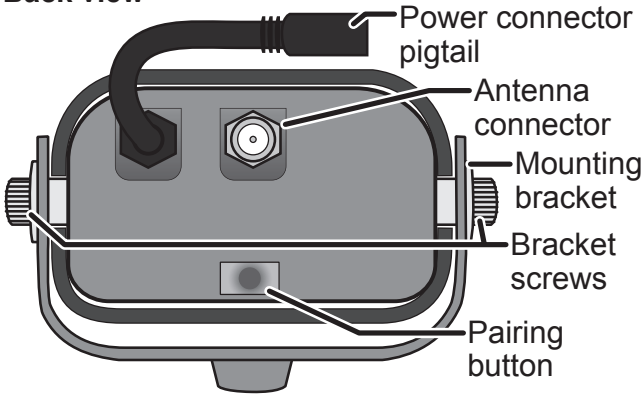

What the lights mean


Light	State	What it means
Power status	On	The camera is on.
	Off	The camera is off.
Link status	Flashing	The camera is in pairing mode.
	Green	The camera is connected to the receiver.
	Off	The camera is in standby.

Placing the Weatherproof Video Camera

The weatherproof video camera is not waterproof. If using outside a suitable location would be under an eave or roof overhang. Avoid placing it in a location exposed to direct sunlight or direct weather conditions.

Using the Camera Stand

You can mount the camera with the stand on the bottom (on a wall or table-top) or on the top (on the ceiling).

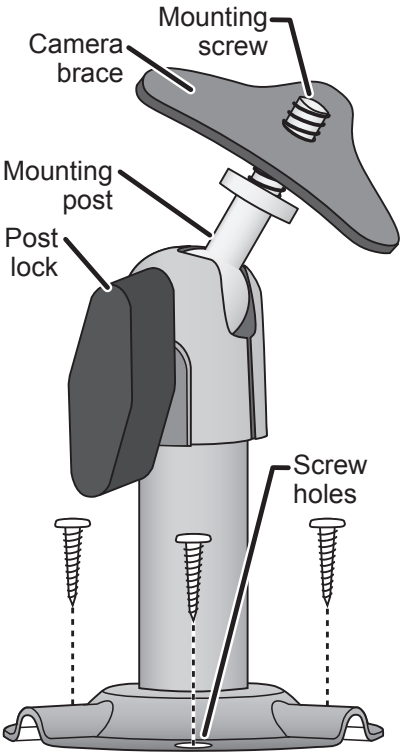


When you are positioning the camera, you might want to bring the receiver along; it's much easier to get the camera into the right position when you have the display handy.

Switch the bracket (Outdoor Camera only)


If you want to mount the camera in a hanging position, you'll need to flip the bracket to the top of the camera:

1. Loosen the bolts on the side of the mounting bracket.
2. Carefully slide the bracket off of the camera and sun shield.
3. Rotate the bracket 180° and slide it back onto the camera.
4. If necessary, adjust the camera angle, then tighten the bolts.

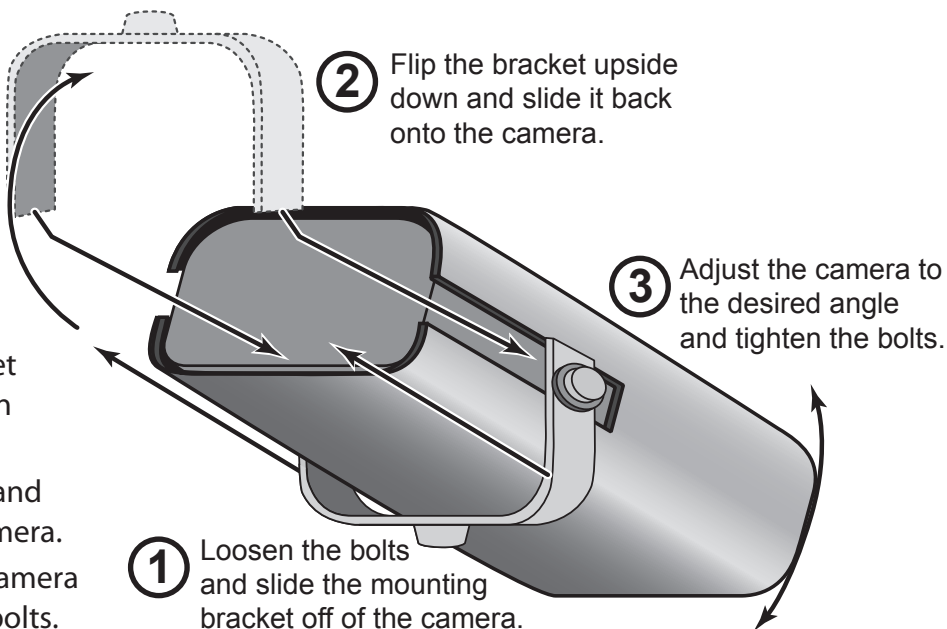

Mount the stand



1. Hold the base of the camera stand where you want to mount it, and mark the location of the screw holes.
2. Use the included screws and anchors to attach the base to the wall or ceiling.
3. Before attaching the camera, tug gently on the stand to make sure it is securely in place.

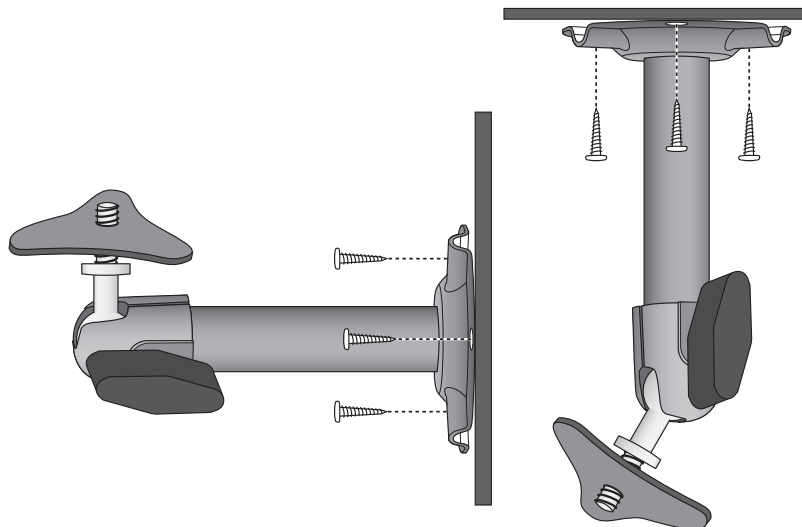

Attach the camera

1. Attach the camera bracket to the mounting screw.

Tighten it a few turns, then turn the camera to face the direction you want.

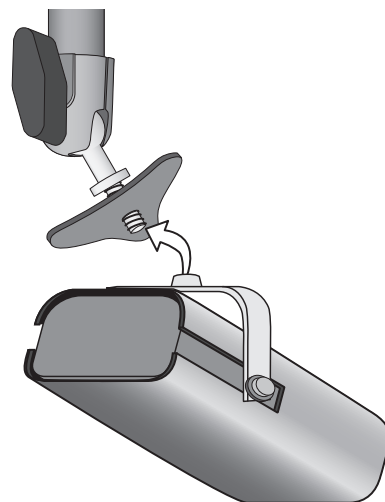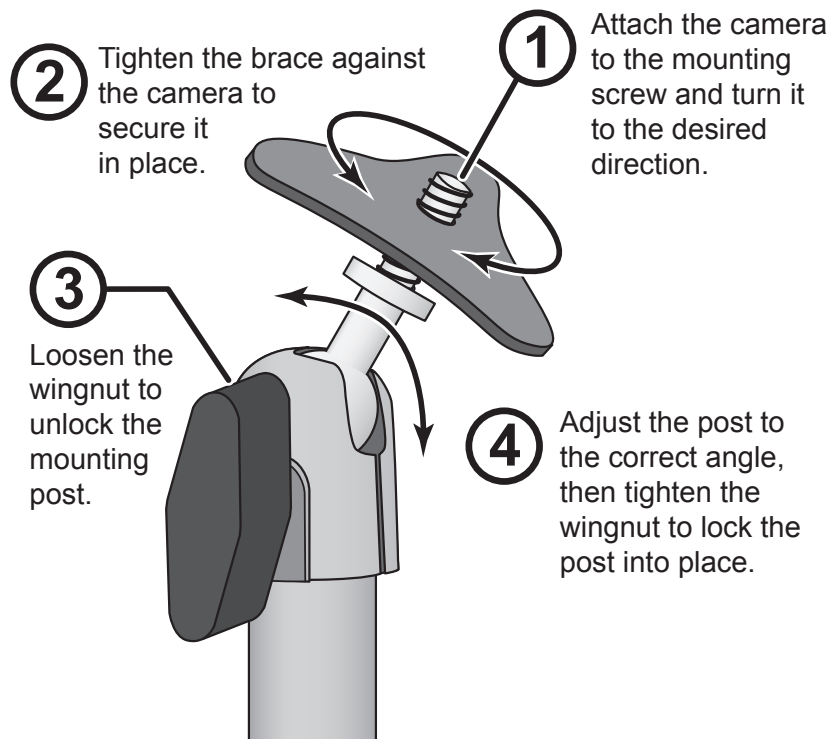

2. Tighten the camera brace up against the bracket to secure it into place.

3. Unlock the mounting post by turning the wingnut to the left a few turns.


4. Set the mounting post to the correct angle, then tighten the wingnut until the post is locked into place.

Adjusting the Sun Shield (Outdoor Camera only)

If there is too much glare in the camera, you can move the sun shield forward to provide more shade for the lens. If the top of the picture is cut off, try moving the sun shield back.

To adjust the sun shield, loosen the bolts on the side of the mounting bracket (see page 11). Slide the sun shield forward or back, then check the picture in the receiver display. When the picture is satisfactory, tighten the bolts again.

Get to Know the Receiver and Remote

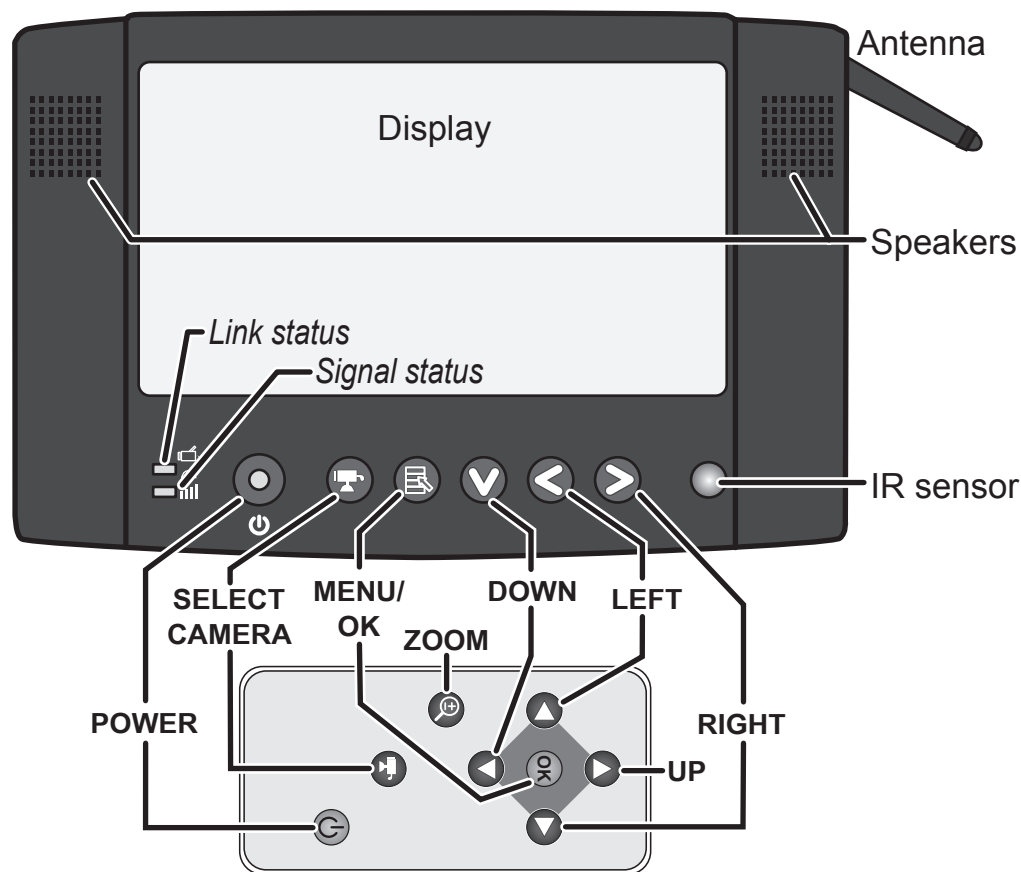

What the buttons do

Button	What it does
POWER	- Turn the receiver on. Press and hold to turn it off.
SELECT CAMERA	- Cycle through the active cameras and quad display. - From the pairing menu: link to the selected camera.
MENU/OK	- Open and close the menu

Button	What it does
DOWN	<ul style="list-style-type: none"> - In zoom mode: pan to the bottom of the zoom area. - In the menu: move the cursor down one line. - In quad display: go to channel 2.
LEFT	<ul style="list-style-type: none"> - In zoom mode: pan to the left side of the zoom area. - In the menu: cycle through the available options for the selected menu item. - In quad display: go to channel 4.
RIGHT	<ul style="list-style-type: none"> - In zoom mode: pan to the right side of the zoom area. - In the menu: cycle through the available options for the selected menu item. - In quad display: go to channel 3.
Buttons on the remote only:	
UP	<ul style="list-style-type: none"> - In zoom mode: pan to the top of the zoom area. - In the menu: move the cursor up one line. - In quad display: go to channel 1.
ZOOM	<ul style="list-style-type: none"> - Enter and exit zoom mode.


What the lights mean

Light	State	What it means
<i>Power status</i>	On	The receiver is on.
	Off	The receiver is off.
<i>Link status</i>	Flashing	The receiver is in pairing mode.
	Off	The receiver in normal operating mode.
<i>Signal status</i>	On	There is a good signal from the camera assigned to the selected channel.
	Off	There is no signal on the selected channel.

What the connections do

Connector	Use it to
USB output	Connect the receiver to your computer for use with the Uniden Guardian Software. (See the PC software manual for more information.)
Audio/video output	Send the signal from the camera to a standard TV (see page 17).

Using the Menu

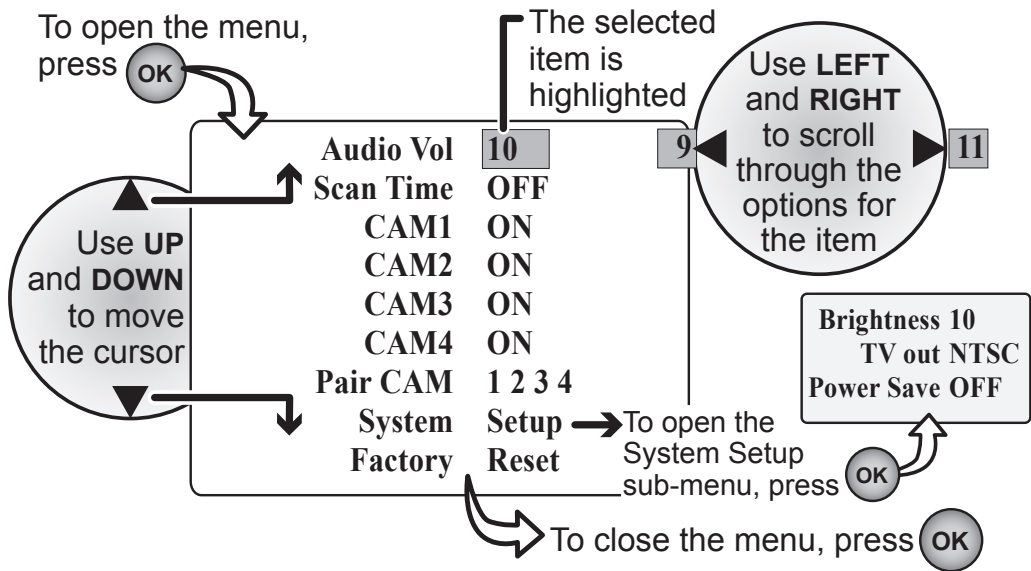

Item	Use it to
<i>Audio Vol</i>	Adjust the volume of the audio from the camera. Choose a value from 0 (off) through 20 (maximum).
<i>Scan Time</i>	Set the length of time the receiver spends on each active camera during a scan (see page 20) or activate quad display (see page 21).
<i>CAM1 – CAM4</i>	Turn each of the four camera channels <i>On</i> (enabled) or <i>Off</i> (disabled).
<i>Pair CAM</i>	Pair a camera to the selected channel (see page 18).
System Setup sub-menu	
<i>Brightness</i>	Adjust the brightness of the display. Choose a value from 1 (min) through 15 (max).
<i>TV out</i>	Change the video output format from <i>NTSC</i> (North America) to <i>PAL</i> (Europe).
<i>Power Save</i>	Turn on power save mode. If you set this to field to <i>Auto</i> , the display turns off if it's idle for more than one minute. (The audio will remain active.) To turn the display back on, press OK .
<i>Factory Reset</i>	Reset the receiver to factory defaults. Any changes or settings will be lost.

Using Zoom Mode

The receiver can zoom in so you can see the video better. In zoom mode, the receiver increases the pixel size and focuses on the center of the picture. You will also see the **ZOOM** icon in the upper right corner of the display.

Normal view (VGA)



Zoomed-in view (QVGA)



Pan and tilt in zoom mode


Once in zoom mode, you can pan and tilt the camera to see the outside edges of the zoomed in area. Use the arrow buttons to pan right and left or tilt up and down.

Pan and tilt features are only available in zoom mode.

Understanding Night Vision


The cameras included with your receiver have infrared LEDs for low-light conditions (24 for the outdoor camera and 11 for the indoor camera).

- ❑ The infrared LED automatically turns on when the ambient light gets too dim (around twilight); the LED provides enough light for the camera to capture clear images in deep twilight or under a very bright full moon. (See page 26 for lux specifications.)
- ❑ For the best night vision results, place the camera no closer than 3 meters (about 10 feet) and no further than 9 meters (about 30 feet) from the point you want to monitor.

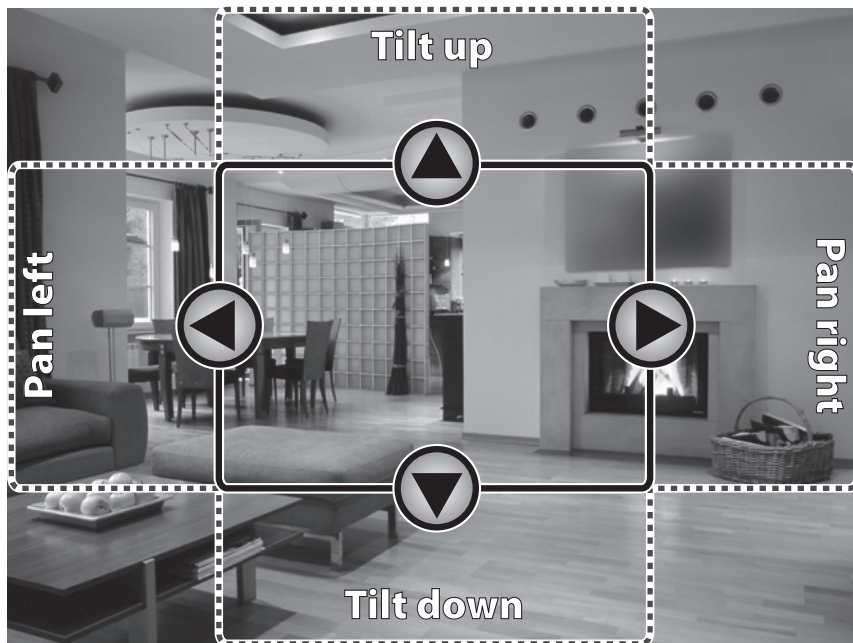

Connecting to Your TV

You can connect the receiver to any standard television with RCA composite video inputs. (maximum 32 inches diagonal recommended)

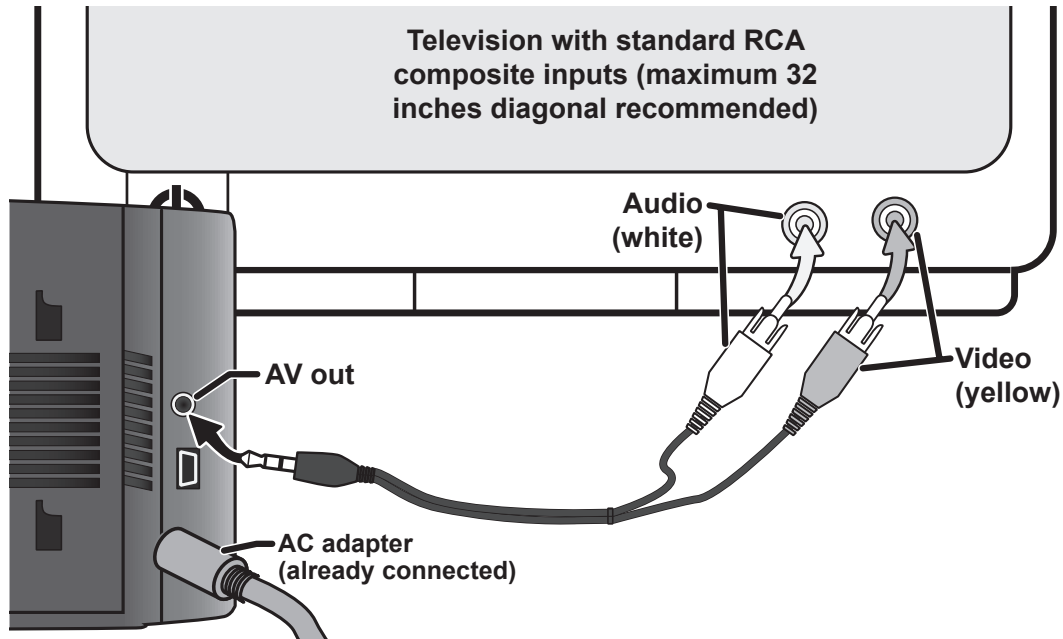

To use bandwidth efficiently, the system compresses the video signal using Motion-JPEG; the system then digitizes the signal before transmitting it to provide a secure video link. This method is optimized for wireless connections, but it can cause an indented image line ("ghosting" or JPEG artifacts) on larger television displays or plasma screens.

Reducing pixellation

When video is put on a very large screen, you can often see the edges of each pixel in the image. There are a few ways to reduce the amount of pixellation on your TV:



- Zoom out on the receiver: at the zoomed in size, some pixellation will always occur.
- Don't use a television larger than 32 inches (32-inch diagonal display).
- Don't use a "stretch" or "zoom" setting on your television; set your television to display the image as it receives it from the system.

Multiple Camera Features

Your receiver supports a total of four active cameras at a time. You can mix and match any of the accessory cameras. (See our website for compatible camera options.)

Pairing Cameras


Pairing is like introducing the camera and the receiver so they can communicate. Any cameras that came with your receiver are already paired for you, so you'll perform the pairing procedure if you want to add a new camera to your system or if you are having trouble with a camera.


1. Make sure the camera is powered on.
2. On the receiver, open the menu and scroll down to *Pair CAM*.
3. Use **RIGHT** or **LEFT** to highlight the channel you want to use for this camera.
4. Press . The receiver goes into pairing mode for 60 seconds.
5. On the camera, press the **LINK** or **PAIR** button to put it into pairing mode, also. The position of this button varies from camera to camera; see the manual that came with your camera.
6. On the receiver, open the menu.
7. Scroll down to *CAM1* through *CAM4* and select the channel assigned to the new camera.
8. Use **RIGHT** or **LEFT** to enable the channel (set it to *On*).
9. Press  to cycle through the channels, and verify that the video signal from the new camera appears on the correct channel.


Some things to know about pairing cameras:

- ❑ As soon as the receiver detects a camera in pairing mode, it links to that camera and assigns it to the selected channel.
- ❑ If a camera is already assigned to the selected channel, the receiver overwrites that camera link with the new one.
- ❑ Make sure you enable the channel after you pair the camera. If a channel is set to *Off*, the receiver skips that camera during a scan and leaves that camera's position blank in quad view.
- ❑ Only pair one camera at a time! The receiver links to the first camera it detects. If two or more cameras are in pairing mode, you can't control which camera the receiver will detect first.

Changing to a Different Camera

- On the receiver, press  to cycle through the enabled channels from CAM1 through CAM4. After the last enabled channel, the receiver goes to quad display, then back to the first camera.

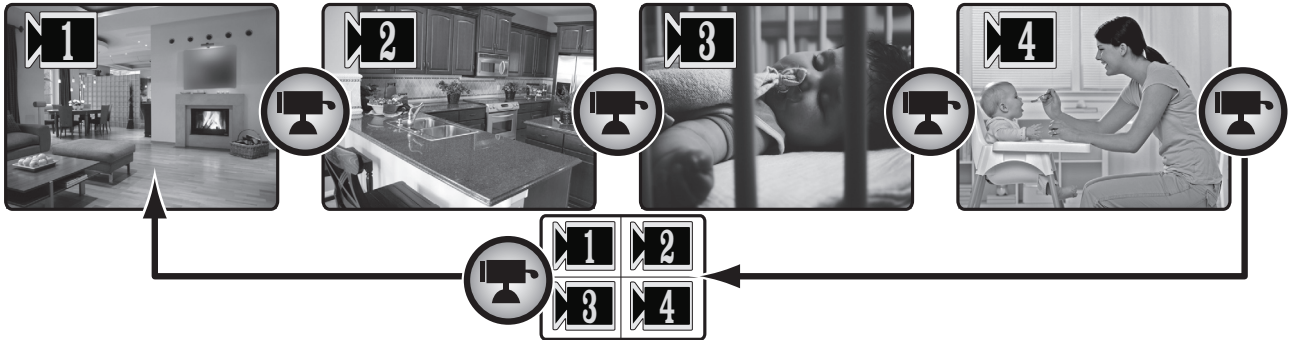

- Each time you press , the receiver goes to the next enabled channel, regardless of whether there is a camera present on that channel. If there is no camera signal on a particular channel, the receiver shows a black screen with the message *No Signal*.




- You should only turn a channel *On* if you have a camera paired to that channel.
- The receiver skips any channels that are set to *Off* in the menu.



Setting Up a Scan

You can have the receiver automatically cycle through the enabled channels.


1. Open the menu, and scroll down to select *Scan time*.
 2. Use **RIGHT** or **LEFT** to select the amount of time you want the receiver to stay on each camera. Choose *5 seconds*, *10 seconds*, *15 seconds*, or *20 seconds*. To turn off the scan and stay on the current channel, select *Off*. To set the receiver into quad display, select *Quad* (see Using Quad Display on page 21).
 3. Double-check the channel settings (*CAM1* through *CAM4*) to make sure the correct channels are enabled.
- The receiver stays on each camera channel for the selected number of seconds, then switches to the next active channel.
 - The receiver starts the scan at the currently selected channel, then scans the remaining channels in order.
 - The receiver will only scan channels that are enabled in the menu.
 - The receiver does not go into quad display during a scan.
 - If you press  to manually switch channels, the receiver turns off the scan. Follow the procedure above to turn it back on.

If...	Try...
The display says <i>No Signal</i> when the receiver switches to a particular channel.	- Making sure there is a camera assigned the channel. - Making sure the camera is in range of the receiver. - Troubleshoot the camera assigned to that channel.
The receiver won't switch to a particular channel.	- Making sure the channel is enabled (set to <i>On</i> in the menu).
The receiver won't scan channels.	- Making sure <i>Scan Time</i> is not set to <i>Off</i> or <i>Quad</i> . - Making sure more than one channel is enabled.
I can't switch channels manually.	- Making sure more than one channel is enabled. - Making sure you are not in quad display.

Using Quad Display


In quad display, the receiver puts all four channels on the screen at the same time. The channels appear in the positions shown to the right:

- If a channel is disabled or there is no signal from the camera, that channel's section of the quad display will be blank.

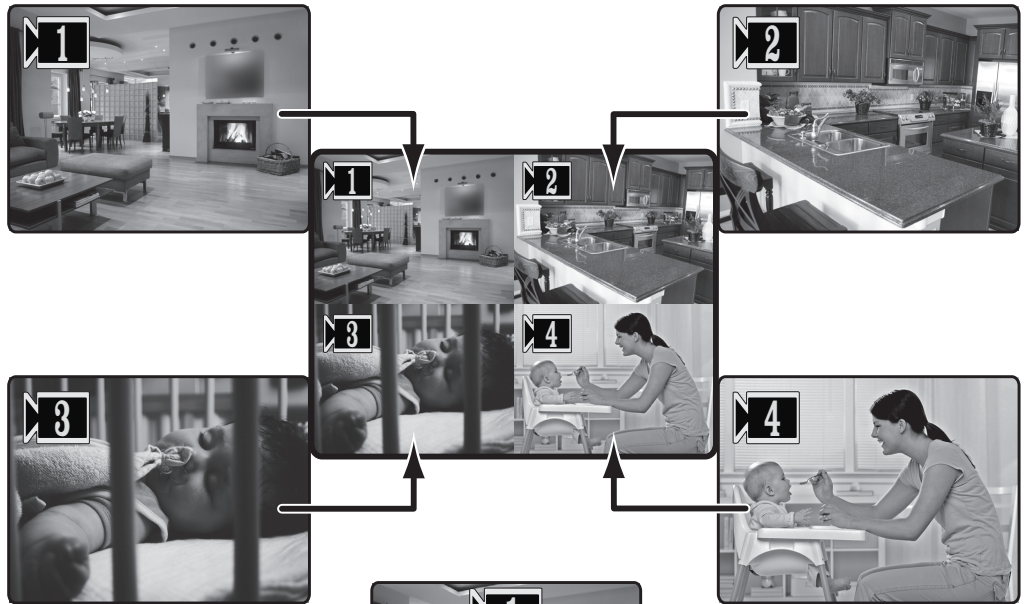


To enter quad display

1. Open the menu.
2. Scroll down to select *Scan time*.
3. Use **RIGHT** or **LEFT** to select *Quad*.

OR press  until the display cycles around to quad display.

To exit quad display

Press the arrow keys to go to the channel you want.

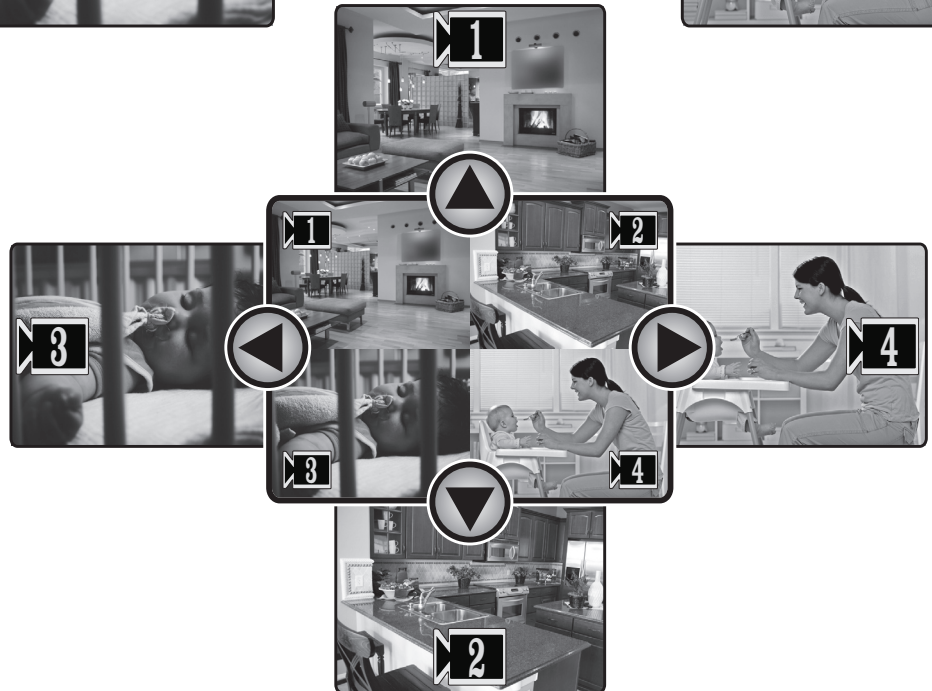

Solving Problems

If you have any trouble with your system, try these simple steps first. If you still have a question, visit our website; www.uniden.com.au for Australia or www.uniden.co.nz for New Zealand.

If...	Try..
The image on the display is too bright.	<ul style="list-style-type: none"> - Adjusting the brightness on the receiver (in the system setup sub-menu). - Moving the camera's sun shield forward over the lens.
The image on the display is too dim.	<ul style="list-style-type: none"> - Adjusting the brightness on the receiver (in the system setup sub-menu). - Making sure the camera is at the right distance for low-light conditions.
Part of the image is cut off.	<ul style="list-style-type: none"> - Moving the camera's sun shield back away from the lens. - Checking the camera path for any obstacles.
The image on my TV is too bright/dark.	- Adjusting the brightness on your television. (The receiver brightness setting does not affect the television.)
The image does not fit my TV screen.	- Changing the <i>TV out</i> setting on the receiver (in the system setup sub-menu).
The display is completely blank.	<ul style="list-style-type: none"> - Making sure the AV output cable is not connected. - Making sure the USB cable is not connected. - Making sure the receiver is plugged in. - Switching to a different camera. (If the receiver is in quad display mode and the cameras are not working, the screen could be blank.) - Resetting the receiver.
The display just says <i>No Signal</i> .	<ul style="list-style-type: none"> - Switching to a different channel. - Checking the channel status icon to see which channel the receiver is on. Make sure the camera assigned to this channel is powered on. - Re-pair the camera to the receiver.
The image on the screen is frozen.	<ul style="list-style-type: none"> - Resetting the camera. - Resetting the receiver.
None of the buttons on the receiver or the remote respond when I press them.	- Resetting the receiver.



Unstable or Weak Signal




If the video seems to lag and or the audio sounds weak, the camera and the receiver do not have a strong, clear signal between them. There are several causes for a weak signal:

Possible Cause	Solution
The camera might be too far from the receiver.	<ul style="list-style-type: none">- Adjust the antennas on the receiver and the camera. Often, changing the angle of the antenna can improve the signal strength.- Try moving the camera closer to the receiver.
There may be too many obstacles between the camera and receiver.	<ul style="list-style-type: none">- Adjust the antennas on the receiver and the camera.- Remove as many obstacles from the signal path as possible, especially reinforced concrete walls and any large metal objects that might reflect the signal.- Avoid placing the camera and receiver where the signal path crosses a high-traffic area or body of water. For example, place the camera on the same side of a hallway as the receiver or mount the camera at least 2m (about 7 feet) up.- Relocate the camera and receiver so that there is a clear line of sight between them.- Try moving the camera closer to the receiver.

Weak signal and video performance

The video performance is directly affected by the signal quality. As the signal weakens degrades, the amount of data transferred decreases, and the video frame rate goes down. The table below shows a breakdown of the performance you can expect at the different levels of signal quality.

Signal Level	Icon	Data Rate (kbps)	Frames per second (approx)	
			QVGA (Zoom)	VGA (Normal)
Perfect		1062~1280	15~20	5~10
Good		725~1062	12~16	3~5

Signal Level	Icon	Data Rate (kbps)	Frames per second (approx)	
			QVGA (Zoom)	VGA (Normal)
Fair		543~725	8~12	2~4
Low		250~543	0~5	0~1
Zero		0~250	0	0

If the suggestions above don’t provide enough improvement in the the signal quality, you may want to run the camera at QVGA or zoom mode. When the camera is in zoom mode, it sends fewer pixels to the receiver, so the video performance is not as affected by the weak signal.

Noise or Static

The most likely cause of noise (flickering image) or static is interference. There are many common sources of interference:

- ☐ electrical appliances, especially microwave ovens
- ☐ computer equipment, especially wireless LAN equipment
- ☐ other radio-based wireless devices, such as cordless telephones
- ☐ wireless controllers, or wireless headphones or speakers
- ☐ large florescent light fixtures (especially if they give off a buzzing noise)
- ☐ working motors (hair dryers, heater/air conditioners, water pumps)

If the static is only on 1 camera	If the static is on all cameras
<ul style="list-style-type: none"> - Check near the camera for one of the common interference sources. - Try moving the camera away from a suspected source, or try moving the suspected source so it’s not between the camera and the receiver. - Try moving closer to the receiver. There is always more noise at the edges of the receiver’s range. 	<ul style="list-style-type: none"> - Check near the receiver for the source of interference. - Try moving the receiver away from a suspected source, or turn off the source if possible. - Try raising the receiver’s antenna so it stands straight up.

Resetting Your System

Resetting the camera or receiver will erase any changes and set all values back to the default.

You should only reset your system under the following conditions:

Resetting the camera	Resetting the receiver
<ul style="list-style-type: none">- You are unable to pair the camera to the receiver.- The image on the screen is frozen.	<ul style="list-style-type: none">- The buttons on the receiver are not responding.- The image on the screen is frozen, and resetting the camera did not help.

To reset the camera or receiver, unplug the AC adapter. Wait at least 15 seconds, then reconnect the AC adapter.

Additional Information

Product Specifications

Radio Frequency Transceiver	
RF Frequency	2402 Mhz ~ 2483.5 Mhz
Modulation	GFSK
Spread spectrum	Frequency Hopping
Anti Interference	Clean Channel Dynamic Select
Selectable camera channel	4
Data rate	2 Mbps
Channel bandwidth	2 MHz
Transmitting range	200 meters/600 feet in an open area (line of sight)

Image Specification	
Output Image resolution	640 x 480 (VGA)/ 320 x 240 (QVGA)
Image processing	Motion JPEG
Exposure	Auto
White balance	Auto

System Specifications	Camera (Outdoor/Indoor)	Receiver
Weight	240g/110g	500 g
Dimension	175 x 64 x 42 mm / 115 x 60 x 19 mm	220 x 145 x 36 mm
Operating temperature	-10° C (+14° F) to +50° C (122° F)	
Input voltage	100-240 V AC @ 60 or 50 Hz	
Operating voltage	5 V DC @ 1 Amp	5 V DC @ 1 Amp
Low light solution	24 IR LEDs, 1 Low light sensor / 11 IR LEDs, 1 Low light sensor	
Low light sensitivity	1-8 lux	
Picture sensor	OV7725 1/4' Color CMOS	
Lens	F3.6mm H:53 V:40	
Output Jacks		AV OUT : 3.5 mm headset jack to RCA USB : USB 1.1 or above

One-year Limited Warranty

UWS1117 Digital Wireless Surveillance System

IMPORTANT Satisfactory evidence of the original purchase is required for warranty service

Please refer to our Uniden website for any details or warranty durations offered in addition to those contained below.

Warrantor

The warrantor is either Uniden Australia Pty Limited ABN 58 001 865 498 ("Uniden Aust") or Uniden New Zealand Limited ("Uniden NZ") as the case may be.

Terms of Warranty

Uniden Aust/NZ warrants to the original retail purchaser only that the UWS 1117 ("the Product"), will be free from defects in materials and craftsmanship for the duration of the warranty period, subject to the limitations and exclusions set out below.

Warranty Period

This warranty to the original retail purchaser is only valid in the original country of purchase for a Product first purchased either in Australia or New Zealand and will expire one (1) year from the date of the original retail sale.

If a warranty claim is made, this warranty will not apply if the Product is found by Uniden to be:

- (A) Damaged or not maintained in a reasonable manner or as recommended in the relevant Uniden Owner's Manual;
- (B) Modified, altered or used as part of any conversion kits, subassemblies or any configurations not sold by Uniden Aust or Uniden NZ;
- (C) Improperly installed contrary to instructions contained in the relevant Owner's Manual
- (D) Repaired by someone other than an authorized Uniden Repair Agent in relation to a defect or malfunction covered by this warranty; or
- (E) Used in conjunction with any equipment, parts or a system not manufactured by Uniden.

Parts Covered

This warranty covers the Product and included accessories.

User-generated Data

This warranty does not cover any claimed loss of or damage to user-generated data (including but without limitation phone numbers, addresses and images) that may be stored on your Product.

Statement of Remedy

If the Product is found not to conform to this warranty as stated above, the Warrantor, at its discretion, will either repair the defect or replace the Product without any charge for parts or service. This warranty does not include any reimbursement or payment of any consequential damages claimed to arise from a Product's failure to comply with the warranty.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is in addition to and sits alongside your rights under either the COMPETITION AND CONSUMER ACT 2010 (Australia) or the CONSUMER GUARANTEES ACT (New Zealand) as the case may be, none of which can be excluded.

Procedure for Obtaining Warranty Service

Depending on the country in which the Product was first purchased, if you believe that your Product does not conform with this warranty, you should deliver the Product, together with satisfactory evidence of your original purchase (such as a legible copy of the sales docket) to Uniden at the addresses shown below. You should contact Uniden regarding any compensation that may be payable for your expenses incurred in making a warranty claim. Prior to delivery, we recommend that you make a backup copy of any phone numbers, images or other data stored on your Product, in case it is lost or damaged during warranty service.

UNIDEN AUSTRALIA PTY LTD

Service Division
345 Princes Highway,
Rockdale, NSW 2216
Phone number: 1300 366 895
Email address: custservice@uniden.com.au

UNIDEN NEW ZEALAND LTD

Service Division
150 Harris Road, East Tamaki
Auckland 2013
Phone number: (09) 273 8377
Email address: service@uniden.co.nz

Uniden®

© 2011 Uniden Australia Pty Ltd/Uniden New Zealand Limited
Printed in PRC